




The following document contains images of Solidor thresholds, in various positions with annotation.

For dimensions of the threshold, please review the sill + threshold guide in the knowledge base.



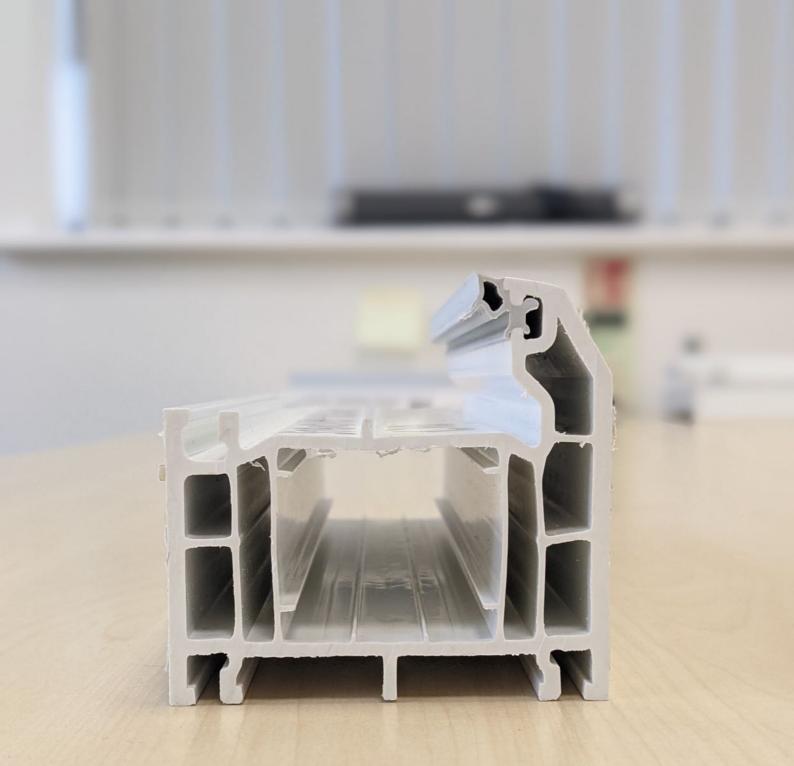

Cross section view of the Standard threshold, C70 profile


This is a C70 threshold

This is an O70 threshold

Notice the difference on the profile


This is the Standard threshold, O70 profile

This is a cross section of the O70 standard threshold

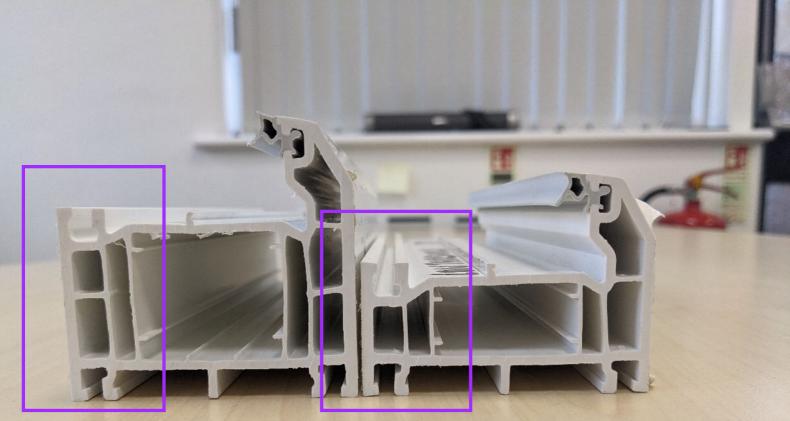


This is a standard treshold, C70 This is a Low PVC threshold, C70


Notice the difference in internal height

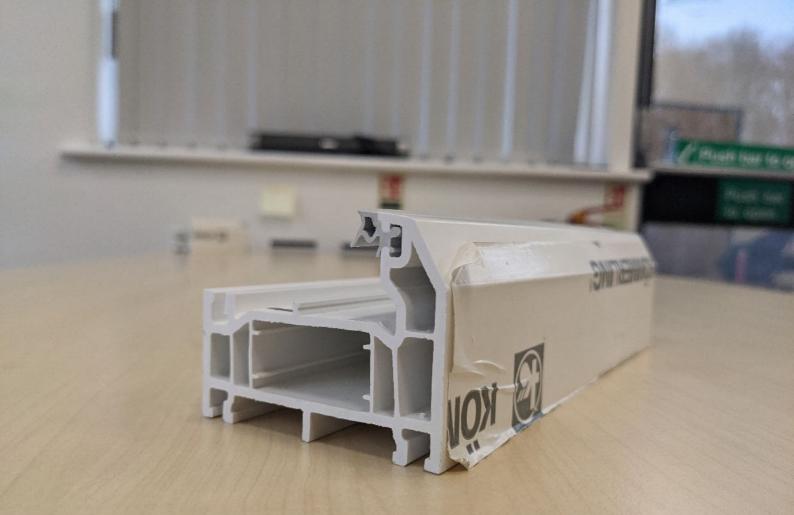


Low PVC threshold C70 profile

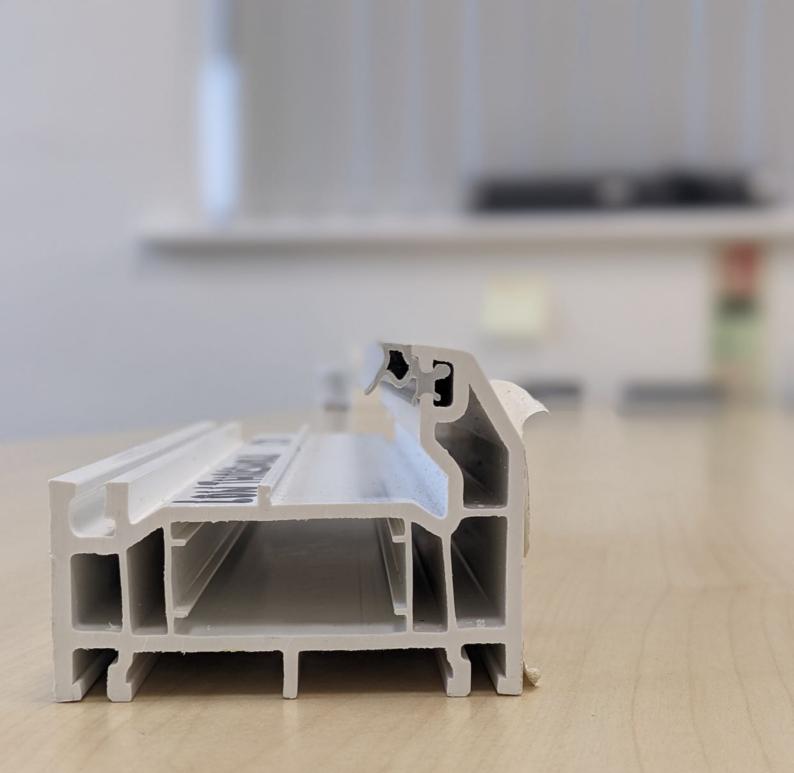

Cross section of the Low PVC threshold

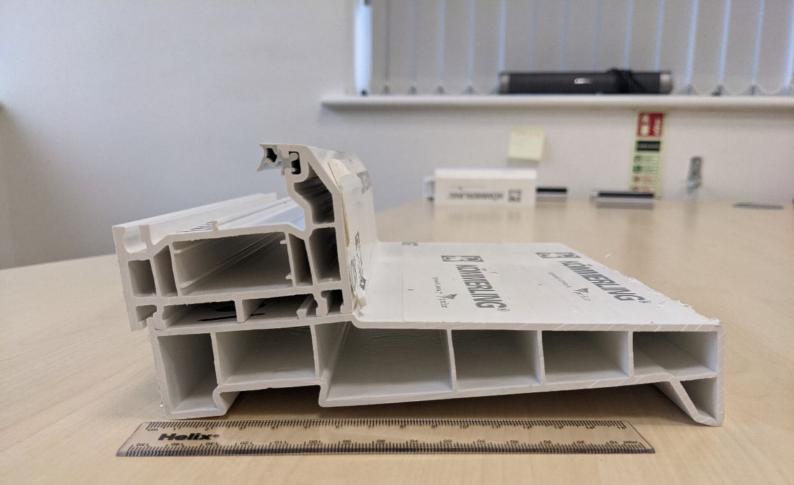

This is a cross section of the low PVC threshold, C70, on a 180mm cill.

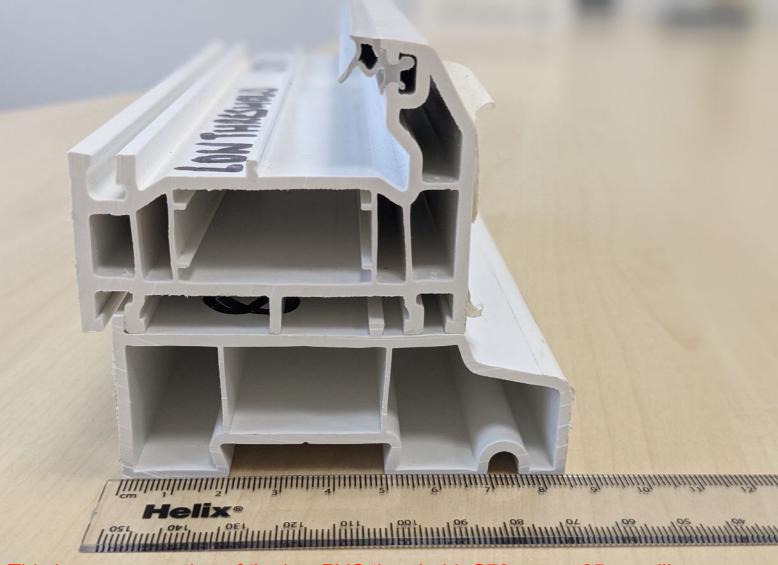

This is a cross section of the low PVC threshold, C70, on an 85mm cill.

Annun Martin This image, (of a low PVC threshold on an 85mm cill), demostrates the additional height the cill creates, and how they fit together.




This is a cross section of the AM3-70 threshold, on a 180mm cill.



This is an AM3 threshold, not to be confused with the AM3-70



This is a cross section of the AM3 threshold, notice the ramped side.

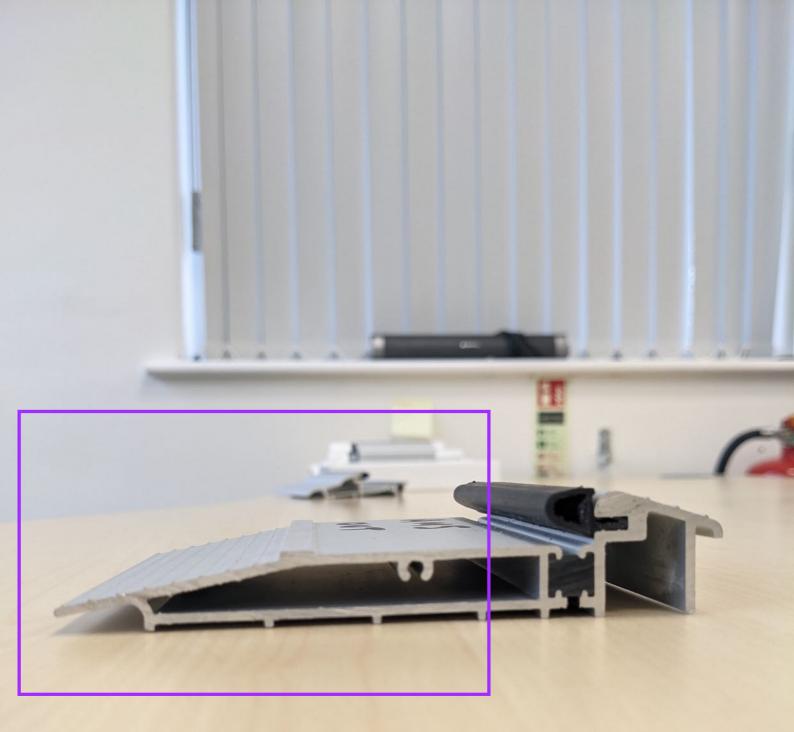


This is an AM5EX Threshold, mobility certified, however unless a legal requirement we would not recommend it as due to the design the drainage can be poor. Notice the low ramped entrance

This threshold can only open outwards, and can't sit on a sill.

Threshold and Cill Guide

Threshold

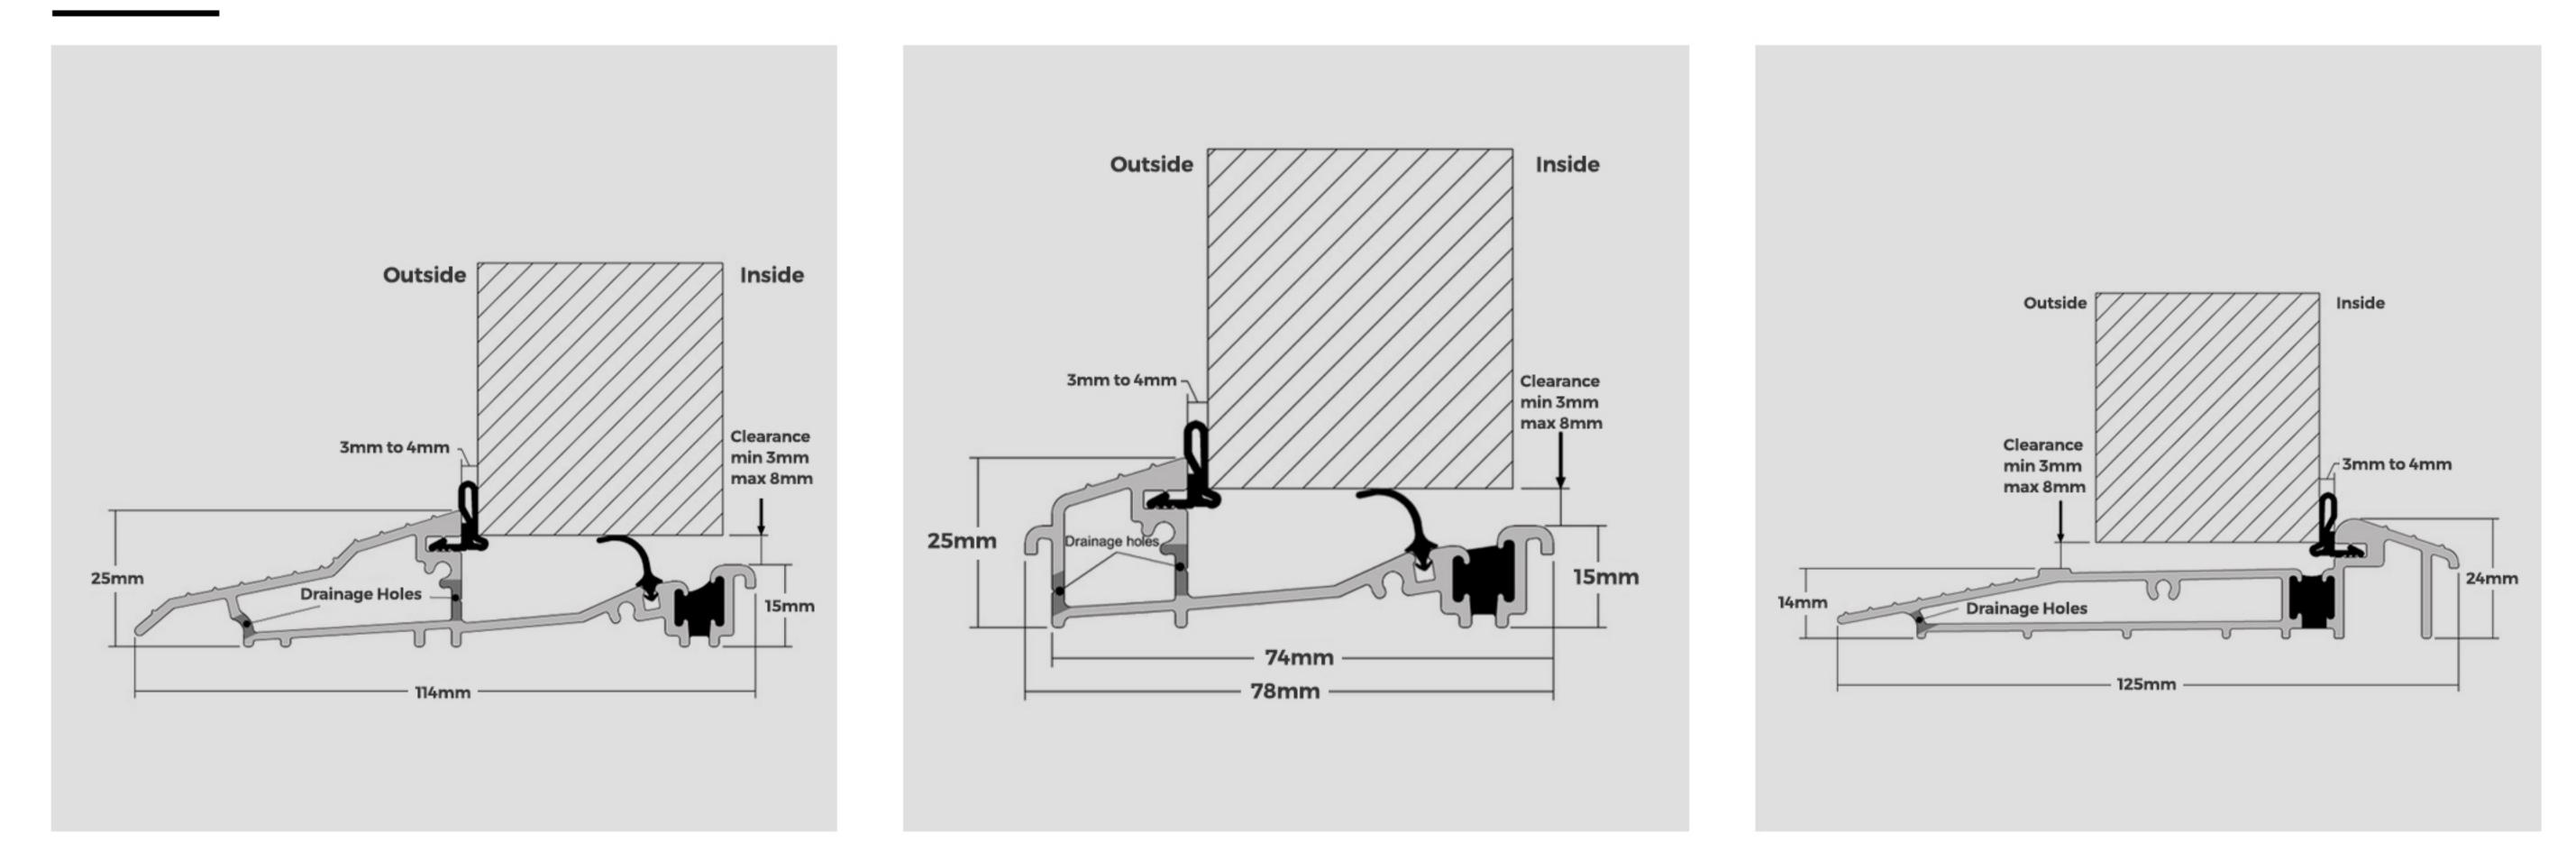



AM3 (Available in silver and gold)

AM3-70

AM5EX (Mobility threshold) (Opens out)

Outerframe

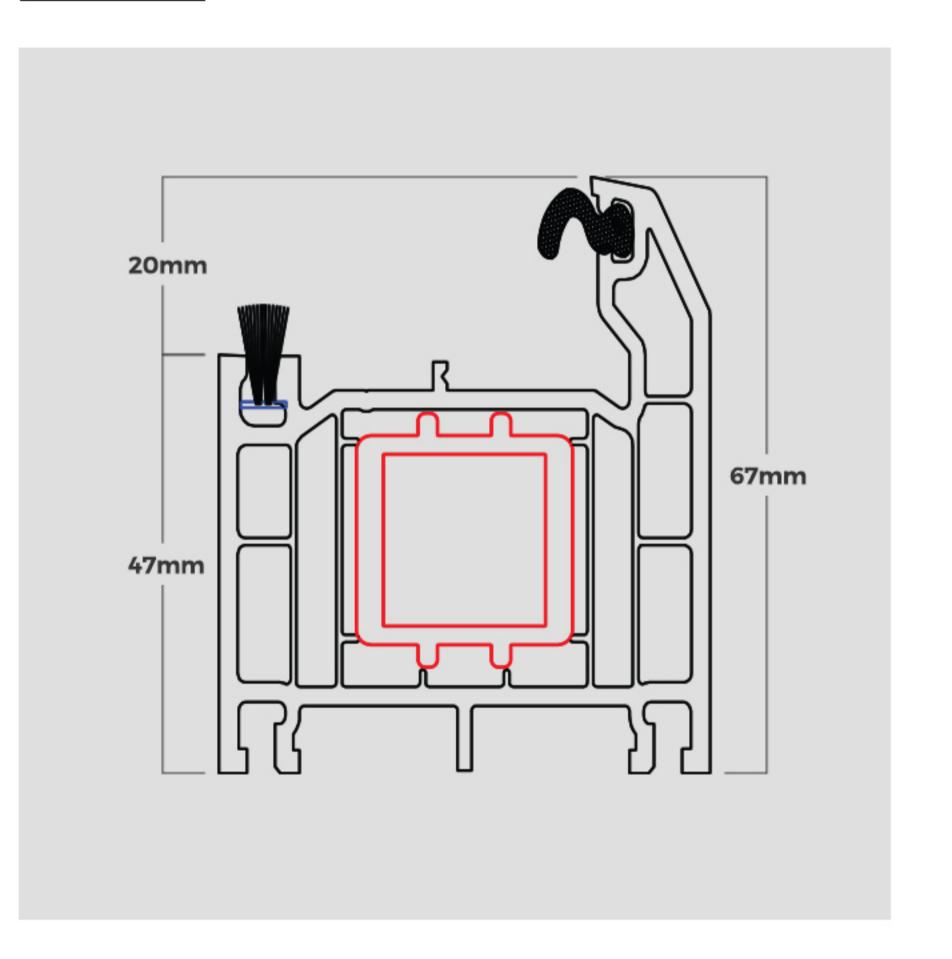


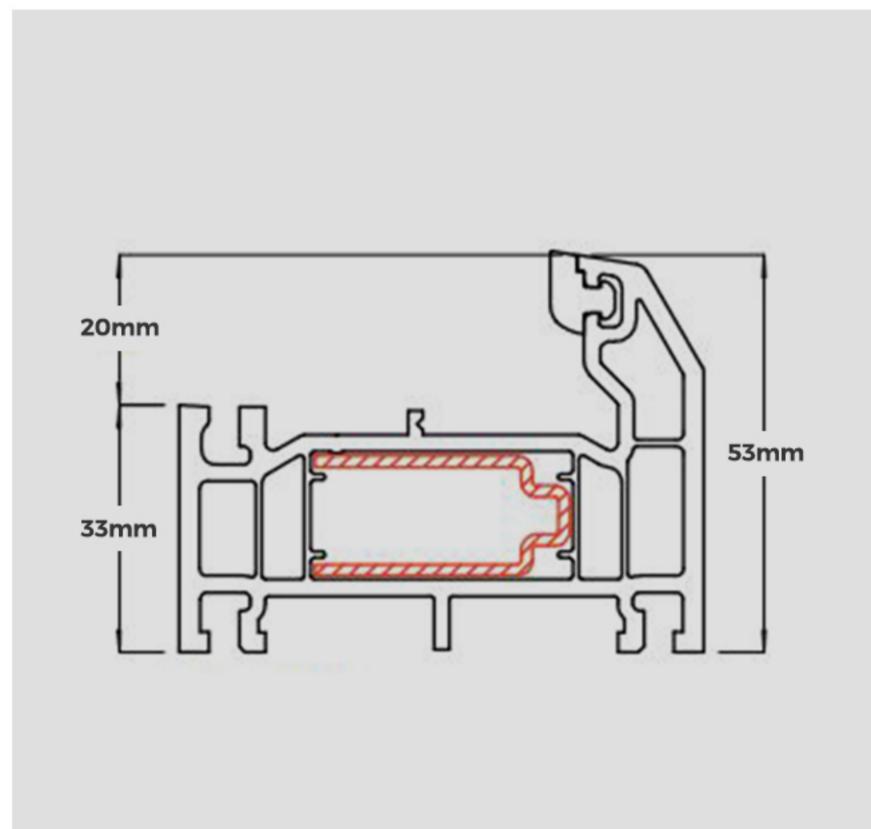

67mm Outerframe

53mm Outerframe

Cill and threshold combinations

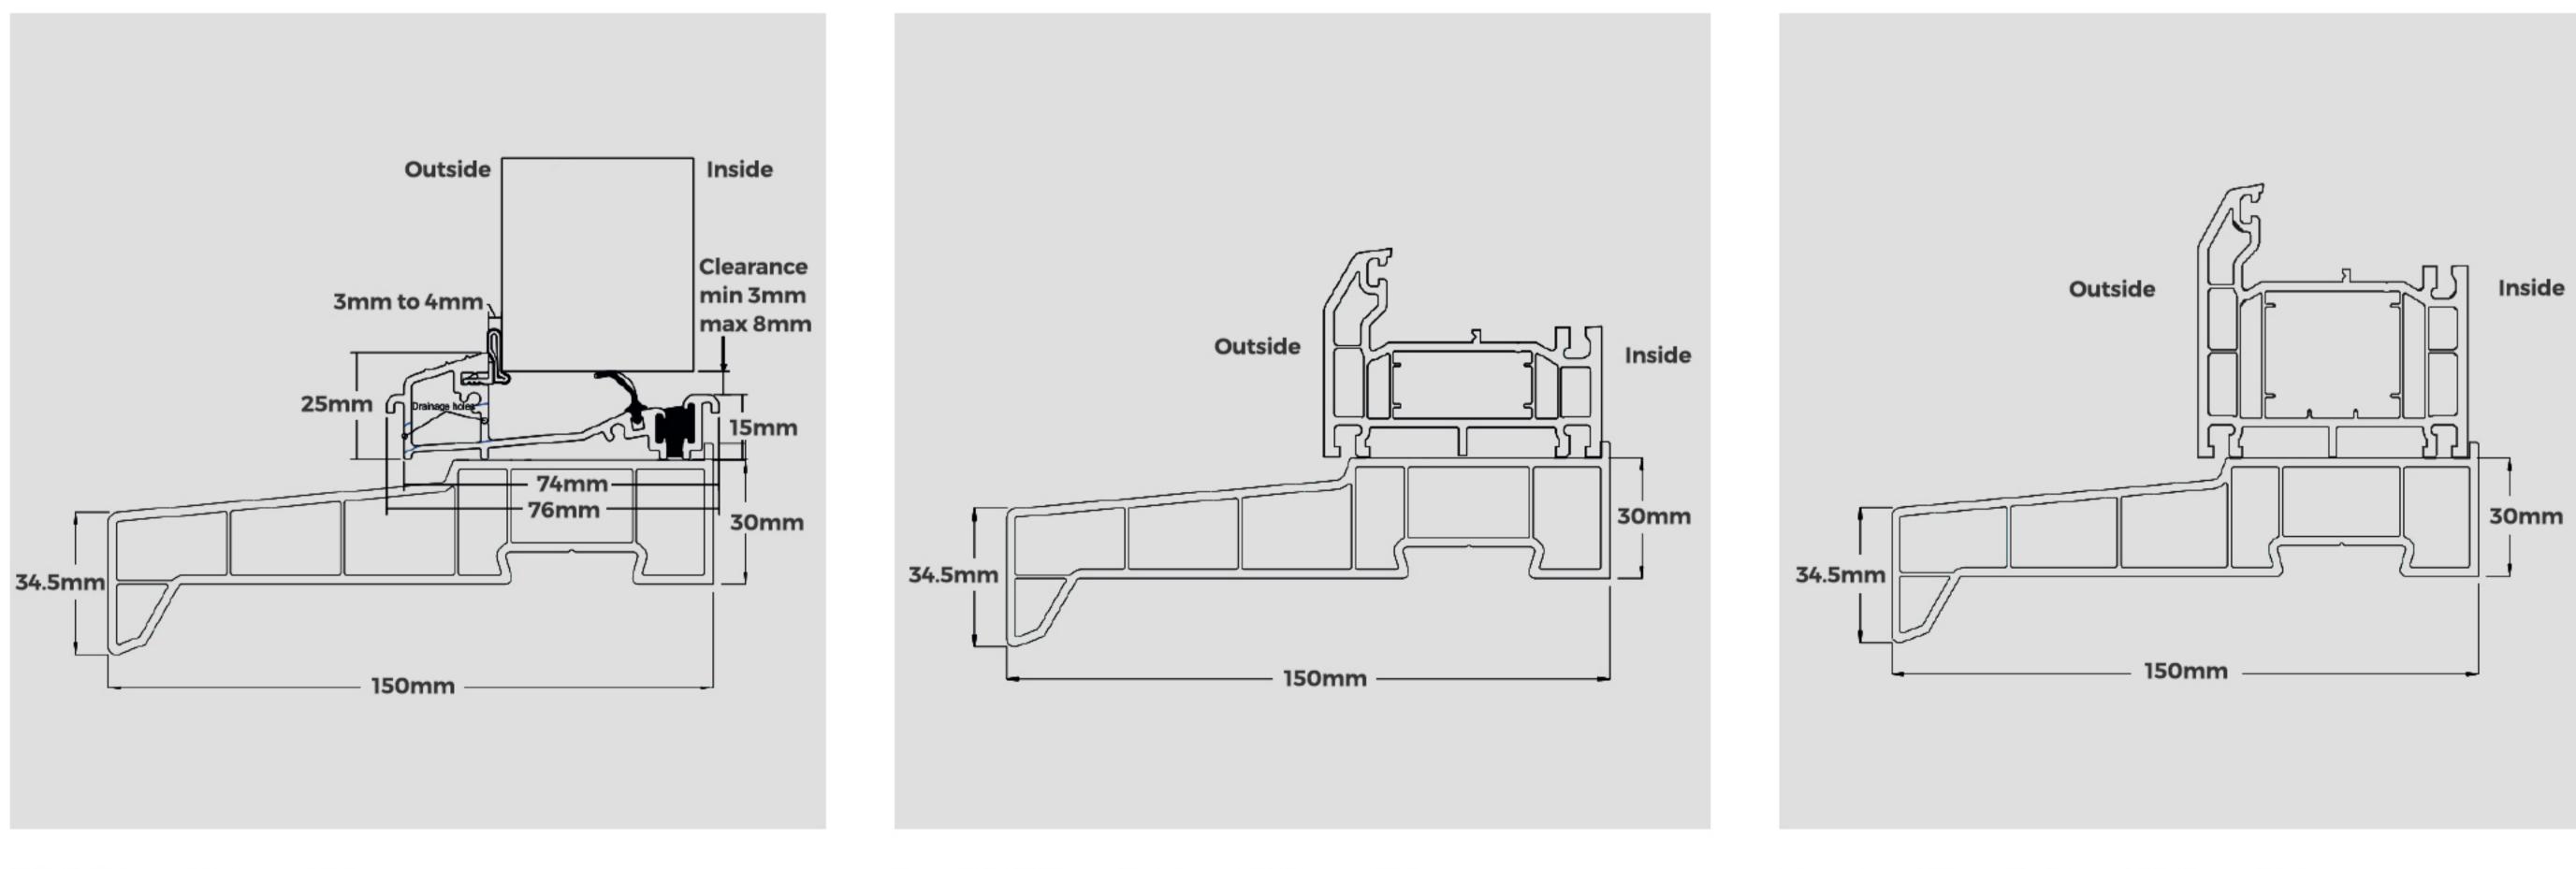

AM3-70 on 150mm Cill

Low PVC Threshold on 150mm Cill

Standard Threshold on 150mm Cill